

AQUAPAC Fit Guide - Phones

These fit guides are compiled using the dimensions of each model. They do not take into consideration the workings of each model.

Alcatel Amoisonic Motorola NEC Nokia Panasonic Philips Sagem
 Samsung Sendo Sharp Seimens Sony Sony Ericsson Treo Trium

Make/Model	Phone/GPS Case
Alcatel	
300/301/302/303	Mini Classic
500/501/525/511	Mini Classic
700/701	No Fit
Max/Gum/View (db)	Mini Classic
Easy/Club	Medium Classic
Amoisonic	
A6/A8	Flip-Phone
Apple	
iPhone	Mini Phone / Small Armband / PDA Classic
Motorola	
191 Talkabout	Mini Classic
192 Talkabout	Mini Classic
205 Talkabout	Mini Classic
250/270c Timeport	Small Classic
A760/	Flip-Phone
A835/A920/A925	Medium Classic
C336/333	Mini Classic
450	Mini Classic
CD930	Medium Classic
G60/ GD67	Mini Classic
GD87	Flip-Phone
i1000plus	No Fit
i2000plus	Medium Classic
i700plus	Medium Classic
L7082/7089/7382/7389 Timeport	Small Classic
M3682	No Fit (with flip open)
M3788	Small Classic
P7382/7389 Timeport	Small Classic
P8090/8097/8160/8167/8767 Timeport	No Fit
RAZR V3	Medium Classic (Is not suitable for Flip-Phone)
SC3160	No Fit (with flip open)
SLVR L7	Mini Classic
ST7760/7762 StarTAC	Flip-Phone
ST7790/7797 StarTAC	Flip-Phone
ST7860/7867/7868 StarTAC	Flip-Phone
StarTAC 3000/6500	Flip-Phone
T180/250/192	Small Classic
T2260/2267 Talkabout	Small Classic
T2282	Medium Classic
T2288/2290/2297 Talkabout	Small Classic
T2988 Talkabout	Small Classic
T8090/8097 Talkabout	No fit
T8160/8167/T720 Talkabout	Flip-Phone
V120c	Small Classic
V2282/2288/2290/2297	Small Classic
V2260/2267/2397	Medium Classic
V265/V3	Flip-Phone
V270c	Medium Classic
V3620/3682/3690	Flip-Phone
V50/60c/66/V600/V300	Medium Classic (with Flip Open)
V557	Flip-Phone
V8088/V8160	Medium Classic (with Flip Open)
V8162	No Fit (with flip open)
X70	No Fit

NEC	
DB2000	Small Classic
DB4000	No Fit (with flip open)
DB500	Small Classic
N22i	Flip-Phone
Nokia	
918	Medium Classic
5510	Medium Classic
6800	Medium Classic
2100/5100/3210/3410/3310/3390/5210	Mini Classic
2160/2170/2180/2190	Medium Classic
282/7650	Medium Classic (with Flip Open)
3510/7210/1100	Mini Classic
3587i	Mini Classic
505/540/6220/6510/3310/3200/6300/6600	Mini Classic or Micro Classic
5110/5120/5125/5130/5160/6650	Medium Classic
5165/5170/5180/5185/5190	Small Classic
6100/6610/7250/8210/8260/8290/8310	Mini Classic or Pager Case
6110/6120/6130/6150/6160/6185/6190	Small Classic
6161/6162	No Fit (with flip open)
6210/6310/6310i	Small Classic (Older versions of the 6210 suffer a feedback problem inside an Aquapac)
6250	Medium Classic
6680/	Small Classic
6300/6330	Mini Classic
6230/6233	Mini Classic
636/638	Small Classic
640/650	Medium Classic
6950/2270/3520/3586/	Mini Classic or Pager Case
7110/7160/7190/7650	Small Classic (No Fit, if Slider is needed)
8800/	Small Classic (with slide open)
8810/8850/8860/8890/8910i	Small Classic (or Medium Classic, if Slider is needed)
9000/9110/9210	No Fit
NGage	Medium Classic (closed)
rinGo	Mini Classic
Panasonic	
Duramax	Medium Classic
GD35/52/55/67/90/92/93/95	Mini Classic or Micro
GD87	Flip-Phone
Promax	Small Classic
X70	No Fit
Philips	
630/330	Medium Classic (with flip open)
Azalis	Small Classic
Fisio	Mini Classic
Genie	Mini Classic
Ozeo	Small Classic
Savvy	Small Classic
Xenium	Mini Classic
Sagem	
3000/3040	Medium Classic
3020/3042	Mini Classic
912/916/920/932/936/940/950	Mini Classic
929/939/959/979	Mini Classic(or No Fit if flip open)
MY-X 5	Mini Classic
Samsung	
600/6100	No Fit (with flip open)
850/8500	No Fit
A-890	Flip-Phone
A100/110/200/288/300/800/500	Medium Classic (with Flip Open)
D700	No Fit (with flip open)
E400/E700	No Fit (with flip open)
i500/X410/X400	No Fit
M100	No Fit (with flip open)
N100/Q100	No Fit (with flip open)
P400/P410/V200	No Fit (with flip open)

S300/S100/Q300/Q200	Medium Classic (with flip open)
T700/T500/T400/T200/T100	Small Classic or Medium Classic (with flip open)
Uproar	Medium Classic
V100/V200	No Fit
Sendo	
D800	Mini Classic (or Medium Classic with Flip Open)
J530	Mini Classic
M550	Medium Classic (with flip open)
S230	Mini Classic
Sharp	
GX 10/GX 20	No Fit (with flip open)
Siemens	
A35/A55/A50	Mini Classic
A36/A40	Mini Classic
C25	Mini Classic or Small Classic
C30	Mini Classic
C35/C55	Mini Classic
CL50	Small Classic
M30	Small Classic
M35/M55/M50/MC60	Mini Classic
S25	Small Classic
S35/S55/ST55	Mini Classic
S40	Mini Classic
SL45/SL55	Mini Classic or Micro Classic
SX1	Mini Classic or Small Classic
U10	Medium Classic
Sony	
CMD-C1	Small Classic
CMD-C1	Small Classic
CMD-CD5	Small Classic
CMD-CD5	Small Classic
CMD-J5	Small Classic or Mini Classic
CMD-J5	Small Classic
CMD-X2000	Small Classic
CMD-X2000	Small Classic
CMD-Z1 plus	Medium Classic
CMD-Z5	Medium Classic (or No Fit with Flip Open)
P800	Medium Classic (or No Fit with Flip Open)
Sony Ericsson	
A1018/A1228/A2618/A2628	Medium Classic
K700i /K750i	Mini Classic or Pager
R310/R380/R520	Medium Classic
R320/R280	Small Classic
R600	Mini Classic
T10/T18/T20	No Fit (with flip open)
T28/Z600	Medium Classic (with flip open)
T65/T100/T200/T230/T300/T310/T630	Mini Classic
T68/T610(i)	Mini Classic
P900	Medium Classic
W800	Mini Classic
Treo	
Palm 600	PDA Classic case
Palm 650	Medium Classic Phone or PDA Classic
Trium	
Aria	Small Classic (or No Fit with Flip Open)
Astral	Small Classic
Cosmo	Mini Classic
Galaxy	Small Classic (or No Fit with Flip Open)
Geo	Small Classic (or No Fit with Flip Open)
Mars	Medium Classic
Neptune	Medium Classic