

## AQUAPAC Fit Guide - Cameras

These fit guides are compiled using the dimensions of each model. They do not take into consideration the workings of each model

**Canon**   **Casio**   **Contax**   **Espon**   **Fuji**   **HP**   **Kodak**   **Konica**  
**Kyocera (Yashica)**   **Lecia**   **Minolta**   **Nikon**   **Olympus**   **Panasonic**  
**Pentax**   **Picoh**   **Samsung**   **Sanyo**   **Sigma**   **Sony**

Make/Model	Camera Case
<b>Audiovox</b>	
DC400	Palm
<b>Canon</b>	
Digital IXUS 30/40/50/55/60/65	Compact
Digital IXUS 330/400/430/500	Compact
Digital IXUS 800 / 850 IS	Compact
Digital IXUS i5/i/i zoom	Compact
Digital IXUS II/IIs	Compact
Digital IXUS v2/v3	Compact
Digital IXUS Wireless	Compact
Digital IXUS 750	Large
EOS 3	Sorry, no fit
EOS 1D/1D Mark II N/1Ds/1Ds Mark II	Sorry, no fit
EOS 5/10/20/30D/D60	Sorry, no fit
EOS 20Da	Sorry, no fit
EOS 3000N	SLR
EOS 1V	Sorry, no fit
EOS 33V	Sorry, no fit
EOS 50E/Elan IIE	Sorry, no fit
EOS 30V Date	Sorry, no fit
EOS 300V/3000V	SLR
EOS 300/300X/350D/400D/ Rebel XT	SLR
EOS 300D	SLR
EOS 400D	SLR
Powershot A30/60/70/75/80/85/95	Compact
Powershot A300/310/400/410/420/430	Compact
PowerShot A460	Compact
PowerShot A650	Large
Powershot A510/520/530/540/550	Compact
PowerShot A560	Compact
PowerShot A570	Compact
Powershot A700	Large
Powershot A720IS	Large
Powershot A710IS	Compact
Powershot A610/A620/A630	Large
Powershot G1/2/3/6	Large
Powershot G5	SLR or Large
Powershot G7	Large
PowerShot G9	Compact
Powershot Pro 1	Sorry, no fit
Powershot S1 IS	SLR or Large
Powershot S2 IS	Sorry, No fit

## AQUAPAC Fit Guide - Cameras

These fit guides are compiled using the dimensions of each model. They do not take into consideration the workings of each model

Canon Casio Contax Espon Fuji HP Kodak Konica  
 Kyocera (Yashica) Lecia Minolta Nikon Olympus Panasonic  
 Pentax Picoh Samsung Sanyo Sigma Sony

Make/Model	Camera Case
Powershot S5 IS	SLR or Large
Powershot S3 IS	SLR or Large
Powershot S45/50/60/70/80/410	Compact
Powershot SD400/430/450/600	Compact
PowerShot A720 IS	Compact
PowerShot SD700 / 750	Mini
PowerShot SD870	Mini
Powershot SD900	Compact
PowerShot SD1000	Mini
Powershot SD800 IS / 850IS	Mini
PowerShot SD950	Mini
PowerShot SX100	Large
Prima Super 90u/115u/130u/150u/180 Date	Compact
<b>Casio</b>	
Exilim Card EX - S100/600	Compact
Exilim Pro EX - P600/700	Compact
Exilim Pro EX - P505	Large
Exilim Zoom EX - 750	Compact
Exilim Zoom EX - S500	Compact
Exilim EX-S880	Mini
Exilim Zoom EX - Z30	Large
Exilim Zoom EX - Z110/120	Compact
Exilim Zoom EX - Z40/55/57/60/70	Compact
Exilim EX-Z77 New	Sorry, no fit
Exilim Zoom EX - Z500/600/750/850/1000	Compact
Exilim EX-Z1080	Mini
Exilim EX-Z1200	Compact
Exilim EX-V8	Mini
QV R41/51/61	Compact
<b>Contax</b>	
Aria	SLR
G1/2 Rangefinder	Large
N1 Auto Focus	Sorry, no fit
NX Auto Focus	Sorry, no fit
RTS III	Sorry, no fit
RX II	Sorry, no fit
T Series T3	Compact
T Series Tix	Compact
T Series TVS III (No JPG image available)	Sorry, no fit
U4R/I4R	Compact

## AQUAPAC Fit Guide - Cameras

These fit guides are compiled using the dimensions of each model. They do not take into consideration the workings of each model

Canon Casio Contax Espon Fuji HP Kodak Konica  
 Kyocera (Yashica) Lecia Minolta Nikon Olympus Panasonic  
 Pentax Picoh Samsung Sanyo Sigma Sony

Make/Model	Camera Case
<b>Epson</b>	
P-2000/4000	Compact
RD1	Compact
<b>Fuji</b>	
@xia SlimShot	Compact
FinePix A120	Compact
FinePix A330/340/345/350/360 Zoom	Compact
FinePix A370	Compact
FinePix A400/405/410 Zoom	Compact
FinePix A403	Compact
FinePix A500 Zoom	Compact
FinePix A605	Compact
FinePix A607 Zoom	Compact
FinePix A820	Compact
FinePix A900	Compact
FinePix A920	Compact
FinePix E500/510/550/900 Zoom	Compact
FinePix F10/11/30 Zoom	Compact
FinePix F40FD	Mini
FinePix F420/440/450/455/460/470 Zoom	Compact
FinePix F480	Mini
FinePix F610/710/810 Zoom	Compact
FinePix IS-1	Sorry, no fit
FinePix S1/2/3 Pro	Sorry, no fit
FinePix S5 Pro	Sorry, no fit
FinePix S700	Large
FinePix S20 Pro Zoom	Sorry, no fit
FinePix S3100/5100/5600/7000/9500	Sorry, no fit
FinePix S6000fd	SLR
FinePix S8000fd	SLR
FinePix S9100	SLR
FinePix V10	Compact
FinePix Z1/2 Zoom	Compact
FinePix Z5fd	Mini
FinePix Z10fd	Mini
FinePix Z40fd	Mini
FinePix Z50fd	Mini
Fuji Finepix 2650	Large
<b>HP</b>	
Photosmart E317/327	Compact
Photosmart M22	Compact

## AQUAPAC Fit Guide - Cameras

These fit guides are compiled using the dimensions of each model. They do not take into consideration the workings of each model

Canon Casio Contax Espon Fuji HP Kodak Konica  
 Kyocera (Yashica) Lecia Minolta Nikon Olympus Panasonic  
 Pentax Picoh Samsung Sanyo Sigma Sony

Make/Model	Camera Case
Photosmart M417/517	Compact
Photosmart M525/527	Compact
Photosmart R717/727/817/818/927	Compact
Photosmart 945	Sorry, no fit
<b>Kodak</b>	
DC200/210	Large
DC200/210 Plus	Large
DC215/220/240/260/265/280/290	Large
DC3400/3800	Compact
DC3200/4800/5000	Large
DCS315/330/420/460/520/560/620/660/760	Sorry, no fit
DCS620/720x	Sorry, no fit
DX-3700	Sorry, no fit
Easyshare C300/310/315/330/360	Compact
Easyshare C340	Large
Easyshare C503/530/533/603/643/663	Compact
EasyShare C613	Compact
EasyShare C653	Compact
Easyshare C875	Compact
Easyshare CD33/40/43	Compact
Easyshare CW330	Compact
Easyshare CX4310	Compact
Easyshare CX6230/6300/6330/6445	Compact
Easyshare CX7220/7300/7310/7330	Compact
Easyshare CX7430/7525/7530	Compact
Easyshare DX3215/3500/3600/3700/3900	Compact
Easyshare DX4330/4530/7630	Compact
Easyshare DX6340/6440/7440	Compact
Easyshare DX6490/7590	Large
Easyshare LS633/743/753/755	Compact
EasyShare M753	Mini
EasyShare M853	Mini
Easyshare P850	Large or SLR
Easyshare P880	Sorry, no fit
EasyShare V1233	Compact
EasyShare V1003	Mini
Easyshare V530/550/603	Compact
Easyshare V570/610 Dual Lens	Compact
EasyShare V803	Mini
EasyShare V1253	Mini
Easyshare Z612/650	Large
Easyshare Z712 IS	SLR

## AQUAPAC Fit Guide - Cameras

These fit guides are compiled using the dimensions of each model. They do not take into consideration the workings of each model

Canon Casio Contax Espon Fuji HP Kodak Konica  
 Kyocera (Yashica) Lecia Minolta Nikon Olympus Panasonic  
 Pentax Picoh Samsung Sanyo Sigma Sony

Make/Model	Camera Case
Easyshare Z700/730/740/760	Large
EasyShare Z812	SLR
EasyShare Z885	Compact
Easyshare Z7590	Large
EasyShare Z1275	Compact
<b>Konica</b>	
KD 100	Compact
KD 220Z	Compact
KD 310Z	Compact
KD 400Z	Compact
KD 500Z/500G	Compact
KD 510Z	Compact
Revio C2	Compact
Minolta Maxxum 5D	SLR
Minolta A200	Sorry, no fit
<b>Kyocera</b>	
Finecam L3/L3v/L4/L4v/S3L/S3X/S4/S5/S5R	Compact
Finecam M410R	Large
<b>Lecia</b>	
M7	
MP	Large
R8/9	Large
C-LUX 2	Mini
D-LUX 3	Large
CM/CM Zoom	Sorry, no fit
V-Lux 1	SLR
<b>Minolta</b>	
Dimage 5	SLR
Dimage 7/7i/ 7hi	Sorry, no fit
Dimage A1 / A2	Sorry, no fit
Dimage E223	Sorry, no fit
Dimage E323	Compact
Dimage F200	Compact
Dimage F300	Compact
Dimage S414	Compact
Dimage xt / xi / x / x20 / x50 / x60	Compact
Dimage Z1, Z2/3/20	Compact
Dimage Z10	Sorry, no fit
Dynax 303	Large

## AQUAPAC Fit Guide - Cameras

These fit guides are compiled using the dimensions of each model. They do not take into consideration the workings of each model

Canon Casio Contax Espon Fuji HP Kodak Konica  
 Kyocera (Yashica) Lecia Minolta Nikon Olympus Panasonic  
 Pentax Picoh Samsung Sanyo Sigma Sony

Make/Model	Camera Case
Dynax 3L	Sorry, no fit
Dynax 4	SLR
Dynax 404	SLR
Dynax 5	Sorry, no fit
Dynax 7	SLR
Dynax 9	Sorry, no fit
Maxxum 3 QD / 4 QD / 5 QD	Sorry, no fit
Maxxum 500si	SLR
Maxxum 7	Sorry, no fit
Maxxum 7D/700si	SLR
Maxxum 8000i	Sorry, no fit
Maxxum 800si	Sorry, no fit
Maxxum 9	Sorry, no fit
Maxxum HTsi	Sorry, no fit
Maxxum QTsi	SLR
Maxxum STsi (QD)	SLR
Maxxum XTsi	SLR
RD3000	SLR
Riva 140mm	Sorry, no fit
Vectis S-1	Compact
Vectis S-100	SLR
X-370	SLR
	Large
<b>Nikon</b>	
AF220/230/240/250	
Coolpix L1	Compact
Coolpix L11	Mini
Coolpix L14	Mini
Coolpix L15	Mini
Coolpix P1	Compact
Coolpix P50	Compact
Coolpix P5100	Compact
Coolpix 3100/3200/2100/2000	Compact
Coolpix 4.3 (zoom lens too large for compact)	Large
Coolpix 3700/4300/4600/4100/2500	Compact
Coolpix 5200	Compact
Coolpix 5400/SQ/4500/4800	Compact
Coolpix 7900/775	Large
Coolpix 7600	Compact
Coolpix 3500	Compact
Coolpix 5900	Compact
Coolpix 5000	SLR
Coolpix 8700	Large

## AQUAPAC Fit Guide - Cameras

These fit guides are compiled using the dimensions of each model. They do not take into consideration the workings of each model

Canon Casio Contax Espon Fuji HP Kodak Konica  
 Kyocera (Yashica) Lecia Minolta Nikon Olympus Panasonic  
 Pentax Picoh Samsung Sanyo Sigma Sony

Make/Model	Camera Case
Coolpix 5700/8800	Sorry, no fit
Coolpix 880/885/990/995	Sorry, no fit
Coolpix 775	Large
Coolpix S200	Mini
Coolpix S51	Mini
Coolpix S50c	Mini
Coolpix S51c	Mini
Coolpix S510	Mini
Coolpix S700	Mini
D1X/D2X/D2XS	Sorry, no fit
D2H	Sorry, no fit
D40	SLR
D50	SLR
D70	SLR
D80	Sorry, no fit
D 100/200	Sorry, no fit
F100	SLR
F3HP	Sorry, no fit
F4s	Sorry, no fit
F5/F6	Sorry, no fit
F65/ 55/55D	Sorry, no fit
F80D	SLR
F90x	SLR
FM10	Sorry, no fit
FM2N	SLR
FM3A	Sorry, no fit
LiteTouch " 110/ 130/ 150	SLR
LiteTouch Zoom 70w/100w	Compact
N55	Compact
N60	SLR
N65	SLR
N70	SLR
N75	SLR
N80	SLR
N8008s	SLR
N90s	Large
Nuvis Mini1/75i/125i	SLR
OneTouch Zoom 90/90s	Compact
Pronea 600i/6i	Compact
Pronea S	SLR
Zoom 3120AF	SLR
	Compact
<b>Olympus</b>	

## AQUAPAC Fit Guide - Cameras

These fit guides are compiled using the dimensions of each model. They do not take into consideration the workings of each model

Canon Casio Contax Espon Fuji HP Kodak Konica  
 Kyocera (Yashica) Lecia Minolta Nikon Olympus Panasonic  
 Pentax Picoh Samsung Sanyo Sigma Sony

Make/Model	Camera Case
700BF/800	
Accura 80	Compact
C - 1/ 21/ 100/ 220Z/ 720Z	Compact
C - 1Z/ 4/ 8/ 9/ 50/ 51/ 60/ 300	Compact
C - 200Z/350Z/860L/990Z	Compact
C - 700UZ/720UZ/730UZ	Compact
camedia c-60	Compact
C - 740/ 960/ 970	Large
C - 765 Ultra Zoom	Large
C - 7000	Large
C- 150/350/500/505	Compact
C- 2000Z/2020Z/2040Z/3000	Compact
C- 3020Z/3030Z/3040Z/4040/990Z	Large
C- 4000/5050/5060	Large
C- 4040Zoom	Large
C- 740/750/760/765/770/730UZ	Large
C700/C2100UZ	Large
C2500L	Sorry, no fit
C5050Z	Sorry, no fit
C-8080 Wide Zoom	Large
Camedia C-40/50Zoom	Sorry, no fit
D- 560/390/510/550/580/630	Compact
D-500L/600L/620L	Compact
E-1/10/20	Sorry, no fit
E-100RS/	Sorry, no fit
E-400	Large or SLR
IS-20 (QD)	Sorry, no fit
IS-30	Sorry, no fit
IS-5	Sorry, no fit
IS-50	Sorry, no fit
Evolt E-500	SLR
Evolt E-330	SLR
Evolt E-300/	Sorry, no fit
LT Zoom 105/120	SLR
MJU - 1/ II	Compact
MJU 300	Compact
MJU 400	Compact
MJU III Zoom 115/120	Compact
MJU Zoom 115/80/140	Compact
Newpic 60	Compact
FE-115	Compact
FE-210	Mini
FE-230	Mini

## AQUAPAC Fit Guide - Cameras

These fit guides are compiled using the dimensions of each model. They do not take into consideration the workings of each model

Canon Casio Contax Espon Fuji HP Kodak Konica  
 Kyocera (Yashica) Lecia Minolta Nikon Olympus Panasonic  
 Pentax Picoh Samsung Sanyo Sigma Sony

Make/Model	Camera Case
FE-280	Mini
FE-290	Mini
OM-2	Compact
OZ10	SLR
Stylus 35mm	Compact
Stylus 740	Mini
Stylus 750	Mini
Stylus 760	Mini
Stylus 780	Mini
Stylus 820	Mini
Stylus 830	Mini
Stylus 1200	Mini
SP-510 UZ	
SP-550 UZ	Compact
SP-560 UZ	SLR
Stylus Verve	Compact
Stylus Zoom 140/400/ 300	Compact
Superzoom 700BF / 800	Large
Superzoom 80W/105/120	Compact
Zoom 2000	Compact
Zoom 310	Large
	Compact
<b>Panasonic</b>	
DMC F1/F7	Compact
DMC FZ 1/FZ3 / FZ7 /FZ8	SLR
DMC FZ4S/FZ5S	Large or SLR
DMC FZ 5/10/15/20	SLR
Lumix DMC-FZ18	SLR
DMC FZ50	SLR
DMC LZ1/LZ2/LZ2K	Sorry, no fit
DMC LZ6 / LZ7	SLR
DMC LC20	Compact
DMC LC40	Compact
DMC LC43/33/80	Large
DMC LC5	Compact
Lumix DMC-LS75	Compact
DMC LX1	Large
Lumix DMC-LX2	Compact
DMC FX7/ FX9	Compact
Lumix DMC-FX10	Mini
Lumix DMC-FX12	Mini
Lumix DMC-FX30 / 33	Mini
Lumix DMC-FX55	Mini

## AQUAPAC Fit Guide - Cameras

These fit guides are compiled using the dimensions of each model. They do not take into consideration the workings of each model

Canon Casio Contax Espon Fuji HP Kodak Konica  
 Kyocera (Yashica) Lecia Minolta Nikon Olympus Panasonic  
 Pentax Picoh Samsung Sanyo Sigma Sony

Make/Model	Camera Case
Lumix DMC-FX100	Mini
DMC-FX01	Compact
DMC-TZ1 10x Zoom	Compact
DMC-TZ3	Large
<b>Pentax</b>	
EI - 100	
EI - 200	Compact
EI-2000	Compact
ESPIO 110Zoom/120/140/160	Sorry, no fit
ESPIO 115M Zoom	Large
ESPIO 90MC/ 738G/838/928	Compact
A30	Mini
Optio M40	Mini
Optio WP	Large
Optio W20/30	Compact
Optio E40	Mini
Optio S /S4/S6	Compact
Optio S/330/550/450/33L/330	Compact
Optio S5i /S5Z	Compact
Optio Z10	Mini
Lumix DMC-LS75	
115M	Compact
160/738G/838/928	Compact
Istd	SLR
MZ-S (QD)	SLR
645N	SLR
Pro90 IS	Sorry, no fit
Pz-1p	Sorry, no fit
ZX 30	Sorry, no fit
ZX 5n	Sorry, no fit
ZX 60	SLR
ZX L	SLR
ZX M	SLR
<b>Ricoh</b>	
Caplio R4	No Fit
Ricoh Caplio R6	Compact
Caplio G3 /G4	Compact
Caplio RR 30/230	Compact
Caplio RR1 /RDC-7	Compact
RDC-5300	Compact
GR - 21	Large

## AQUAPAC Fit Guide - Cameras

These fit guides are compiled using the dimensions of each model. They do not take into consideration the workings of each model

Canon Casio Contax Espon Fuji HP Kodak Konica  
 Kyocera (Yashica) Lecia Minolta Nikon Olympus Panasonic  
 Pentax Picoh Samsung Sanyo Sigma Sony

Make/Model	Camera Case
<b>Samsung</b>	
Digimax 101	Compact
Digimax 201/301	Compact
Digimax 230/ 350	Compact
Digimax 240	Compact
Digimax 50 Duo/130/200/V4	Compact
Digimax 370	Large
Digimax 330	Large
Digimax S800	Compact
L700	Mini
L730	Mini
L830	Mini
L73	Mini
L74	Compact
L77	Compact
NV7 OPS	
NV10	Compact
NV11	Compact
NV20	Compact
SDC - 200Z Nexca	Large
i85	Mini
S630 / 630	Mini
S85	Compact
S1050	Compact
SR4000	SLR
S73	Mini
S730	Mini
<b>Sanyo</b>	
DSC-J1	Compact
<b>Sigma</b>	
SA7N	SLR
SA9	Sorry, no fit
SD9	SLR
SD9/10	Sorry, no fit
<b>Sony</b>	
DSC-F77/77X/88	Compact
DSC-F707/717/828	Sorry, no fit
Cyber-shot DSC-G1	Mini
DSC-H1/2/5/9	Sorry, no fit

## AQUAPAC Fit Guide - Cameras

These fit guides are compiled using the dimensions of each model. They do not take into consideration the workings of each model

Canon Casio Contax Espon Fuji HP Kodak Konica  
 Kyocera (Yashica) Lecia Minolta Nikon Olympus Panasonic  
 Pentax Picoh Samsung Sanyo Sigma Sony

Make/Model	Camera Case
Cyber-shot DSC-H3	
Cyber-shot DSC-H7	
DSC-L1/N1	Compact
Cybershot DSC-N2	Compact
DSC-P1-10/12/32/41/43/52/71/72/73/92/93/93A	Compact
DSC-P100/150/200	Compact
DSC-R1	Sorry, no fit
DSC-S40/60/80/90	Compact
DSC - S75	Large
DSC-S85	Large
DSC-S500	Compact
DSC-S700	
Cyber-shot DSC-H3	
DSC-T1/3/5/5N/7/9/30/33	Compact
Cyber-shot DSC-T20	Mini
Cyber-shot DSC-T70	Mini
Cyber-shot DSC-T100	Mini
Cyber-shot DSC-T200	Mini
DSC-U20/30/40	Compact
DSC-V1	Compact
DSC-V3	Large
DSC-W1/5/7/30/50/70/100	Compact
Cybershot DSC-W55	Mini
Cyber-shot DSC-W80	Mini
Cybershot DSC-W90	Mini
Cyber-shot DSC-W200	Mini
DSLR-A100	SLR